


TOTAL MEMORY	BANK 0 (72-pin)	BANK 1 (72-pin)	BANK 2 (72-pin)	BANK 3 (72-pin)
38MB	4MB	16MB	16MB	16MB
37MB	4MB	4MB	16MB	16MB
40MB	4MB	4MB	16MB	16MB
49MB	4MB	16MB	16MB	16MB
52MB	4MB	16MB	16MB	16MB
64MB	4MB	32MB	32MB	
65MB	1MB	64MB	32MB	32MB
66MB	1MB	1MB	32MB	32MB
68MB	1MB	32MB	1MB	32MB
69MB	4MB	32MB	1MB	1MB
69MB	4MB	4MB	32MB	32MB
69MB	1MB	4MB	32MB	32MB
69MB	4MB	32MB	4MB	32MB
69MB	4MB	32MB	4MB	32MB
69MB	4MB	32MB	4MB	32MB
72MB	4MB	4MB	32MB	32MB
72MB	4MB	32MB	4MB	32MB
80MB	32MB	32MB	32MB	4MB
81MB	1MB	32MB	32MB	32MB
81MB	1MB	32MB	32MB	32MB
84MB	4MB	16MB	32MB	32MB
90MB	32MB	32MB	32MB	32MB
97MB	1MB	32MB	32MB	32MB
128MB	32MB	32MB	32MB	32MB

→ NOTE : All banks accept double-RAS SIMM.

Installation Instructions

→ NOTE : Always observe static electricity precautions. See "Handling Precautions" at the start of this manual.

1. Locate the SIMM banks on the motherboard.
2. Insert the SIMM edge connector at a 90-degree angle onto the socket.

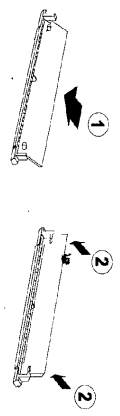

3. Carefully push the SIMM down and back into the socket until the retaining clips of the socket snap, holding the SIMM in place. The holes in the SIMM should match the pins on the socket's retaining clips.

To remove the SIMM/s, pull the retaining latch on both ends of the socket and reverse the procedure above.

