

The following table lists possible jumper settings for the computer. Factory (default) settings are indicated by an asterisk (*). Jumper settings are shown only for reference. You do not need to change the configuration settings (jumper settings) of the computer unless the installation procedure for an option specifically instructs you to do so. Read this section if you need to change a configuration setting.

FEATURE	DESCRIPTION	JUMPER SETTING
Monitor Type	Software selection by Setup*	E11 and E12 installed
	Color	E10 and E11 installed
	Monochrome	E10,E11,E12 no connection
BIOS ROM TYPE		
128KB (16KB)	for factory use	E22,E23,E24,E25 no connect
256KB (32KB)*	Do not change, reserved for factory use*	E22 and E23 no connection E24 and E25 installed
512KB (64KB)	Do not change, reserved for factory use	E22 and E23 installed E24 and E25 installed
1MB (ROM Type (1MB)	Do not change, reserved for factory use	E22 and E23 no connection E24 and E25 installed
IDE IOCHRDY	Enabled*	E1 and E2 installed
	Disabled	E1 and E2 no connection
IDE DIAG	Normal operation*	E3 and E4 no connection
	Diagnostic mode	E3 and E4 installed
I/O Recovery	Enabled*	E8 and E9 installed
	Disabled	E8 and E9 no connection
Operation Mode	Do not change, reserved for factory use*	E14 and E15 installed E17 and E18 installed E20 and E21 installed
*Indicates factory setting		