Read the instructions in this section and in the option documentation before installing optional hardware.

The open 5 1/4" drive bay in your computer provides room for one storage device. The two upper bays already have a floppy and hard drive installed. The lower bay supports a half-height, 5 1/4" device or a standard-height, 3 1/2" device.

You can add another floppy drive to your computer. The diskette drive connector on the main logic board supports up to two internal diskette

You can also install tape drives, CD-ROM drives, and ESDI, SCSI, and ST-506 hard drives. Note, however, that ESDI and ST-506 drives cannot coexist with IDE drives.

Drive installation procedures are provided below:

Installing a 3 1/2" Drive in the 5 1/4" Bay

Use the following procedure to install a 3 1/2" diskette drive in the 5 1/4" bay:

- 1. Have information handy about the drive you are installing. This information is printed on the drive or provided in the documentation that comes with the drive. You may need this information later for the setup utility.
- 2. Adjust drive components such as jumpers, switches, and terminating resistors as necessary. Refer to the drive documentation.
- 3. Turn off the computer, and disconnect all cables.
- 4. Open the computer to gain access to the bay.
- 5. When installing a diskette drive, remove the plastic panel covering the front of the $5 \frac{1}{4}$ " bay. To remove the panel, press down on it from outside the cover. Then, install the drive in a 3 1/2" to 5 1/4" internal disk drive adapter. Refer to the Internal Disk Drive Adapter documentation for more information.
- 6. Use the screws provided with the computer to mount the diskette drive and adapter or the hard drive.
- 7. Make the appropriate drive connections:

Second Diskette Drive - A diskette cable is attached to the factory-installed diskette drive. Connect the unused connector on the diskette drive cable to the new drive.

NOTE: Be sure to align Pin 1 of the cable connector with Pin 1 of the drive connector. Pin 1 of the drive connector is indicated by a stripe on

the cable. Refer to the drive documentation to locate Pin 1 of the connector on the drive.

8. Select an unused cable extending from the power supply, and connect it to the power connector on the back of the drive.

CAUTION: The power cables are keyed to fit only one way. Do not force the connection.

9. Run the setup utility, and enter information about the drive. Refer to the information obtained in step 1.

Installing a 5 1/4" Diskette Drive

Use the following procedure to install a 5 1/4" diskette drive:

- 1. Have information handy about the drive you are installing. This information is printed on the drive or provided in the documentation that comes with the drive. You may need this information later for the setup utility.
- 2. Adjust drive components such as jumpers, switches, and terminating resistors as necessary. Refer to the drive documentation.
- 3. Turn off the computer, and disconnect all cables.
- 4. Open the computer to gain access to the bay.
- 5. Remove the plastic panel covering the front of the 5 1/4" bay. To remove the panel, press down on it from outside the cover.
- 6. Remove the plastic card from the bottom of the bay.
- 7. Select the appropriate mounting holes for the drive. Refer to the drive documentation.
- 8. Slide the drive into the bay. Align the mounting holes in the drive with the three mounting holes on the bottom of the carriage. Refer to the drive documentation.
- 9. Use three screws provided with the computer to mount the drive in the bay.
- 10. A diskette drive cable is attached to the factory-installed diskette drive. Connect the unused connector on this cable to the new drive.

NOTE: Be sure to align Pin 1 of the cable connector with Pin 1 of the drive connector. Pin 1 of the drive connector is indicated by a stripe on the cable. Refer to the drive documentation to locate Pin 1 of the connector on the drive.

11. Select an unused cable extending from the power supply, and connect it to the power connector on the back of the drive.

CAUTION: The power cables are keyed to fit only one way. Do not force the

connection.

12. Run the setup utility, and enter information about the drive.

Faxback Document # 1674 will provide information on using the setup utility.

(jej-05/11/94)