

## MULTIMEDIA JUKEBOX

The utilities described in this chapter requires Microsoft Windows 3.1. To use these utilities, you need to have Microsoft Windows 3.1 installed on your system.

 
You must also have the necessary Windows 3.1 drivers for the version of your CT1350 card. If you have the drivers, refer to your Windows 3.1 manual for the installation of these drivers.

The descriptions below assume a certain degree of understanding on using Microsoft Windows 3.1. If you are new to it, you may like to refer to your Windows 3.1 manual.

This program uses the same conventions as most Windows applications. You can use the mouse or the keyboard to make selections. By double clicking the left mouse button, you can select the files or change the directories. When the desired functions is highlighted, press [ENTER] to execute this operation. You can also use the [ALT] key and the underlined character to select the buttons.

The MIDI FILES box displays all the files with the .MID extension. The MIDI files, which are places in the PLAY QUEUE box., are played in the order they appear. You can skip or remove a file any time.

BUTTON	DESCRIPTION
Q ALL	Pressing this button places all MIDI files in the Play Queue.
QUEUE	Places a selected MIDI file in the PLAY QUEUE. Select (highlight) a file and then press the QUEUE button. MIDI files can be placed in the PLAY QUEUE in any order. You can place a file in the PLAY QUEUE by double clicking the file in the MIDI FILES box.
REMOVE	Removes a file from the PLAY QUEUE. Select a file in the PLAY QUEUE and press the REMOVE button. If a file is not selected, the first file is removed.
CLEAR	Clears all files from the PLAY QUEUE box.
QUIT	Quits the program.
PLAY/ STOP	Starts/stops the songs in the PLAY QUEUE. The name on the button changes to reflect the current mode. To play a song, a file must be in the PLAY QUEUE. When the song has stopped playing, the file will disappear from the PLAY QUEUE.
PAUSE/ CONTINUE	Pauses the Multimedia Jukebox at the current song. The button will change to say "continue". The Multimedia Jukebox will remain at the Pause button until the Continue button is depressed.
SKIP	Skips to the next song in the PLAY QUEUE.



(SMC-05/03/94)