


Inside View:

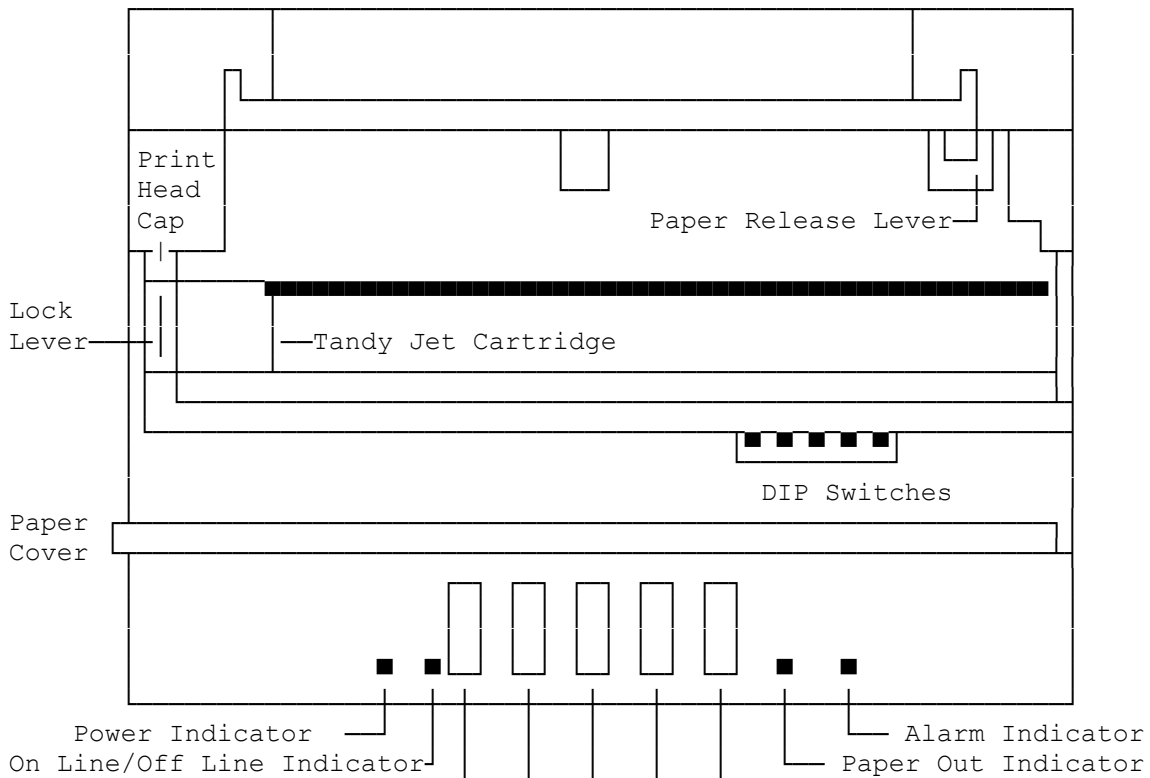

On Line/Off Line Button —|  
LF/FF Button —|

REV Adjust Button  
FWD Adjust Button  
Pitch Button

Note: Some functions of some switches differ according to the printer control mode.

#### Paper Thickness Adjustment Dial:

Used to adjust the distance between the print head and paper.

#### Lock Lever:

Locks or releases the Tandy Jet Cartridge.

#### POWER Indicator:

Lights when the power is on. Blinks when the optional battery pack is low, or is being charged.

#### POWER switch:

A non-locking, one-way slide switch used to turn the printer on and off.

#### ON LINE Indicator:

Lights when the printer is online and goes off when the printer is offline.

#### ON LINE Switch:

**IBM Mode:** Switches the printer online or offline. Selects the printer mode when pressed together with the PITCH switch in the online status.

**EPSON Mode:** Switches the printer online of offline.

#### LF/FF (Line Feed/Form Feed) Switch:

Feeds the paper one line in the offline status. Pressing this switch for one second or longer either ejects the sheets of paper in the printer or feeds a new sheet of paper to the top of the page. Also used to select either HQ (high quality) or Economy mode with the printer online.

#### PITCH Switch:

**IBM Mode:** Selects the print pitch (10 cpi, 12 cpi, 17 cpi or proportional spacing) with the printer offline.

**EPSON Mode:** Selects the print pitch (10 cpi, 12 cpi, 15 cpi, or proportional spacing) with the printer offline. Also selects the condensed mode with the printer online.

#### FWD ADJ (Forward Adjustment) Switch:

Feeds the paper by 2/360 inches with the printer offline. Also sets the head cleaning mode when both REV ADJ switch and this switch are pressed with the printer online.

REV ADJ (Reverse Adjustment) Switch:

Feeds the paper back by 2/360 inches with the printer offline. Also sets the head cleaning mode when both FWD ADJ switch and this switch are pressed with the printer online. (This switch becomes inactive when the auto sheet feeder mode is selected.)

PAPER OUT Indicator:

Lights when the printer is out of paper.

ALARM Indicator:

Shows the error status such as paper jam or carriage home position error.

Paper Release Lever:

Press the lever down to print. Lift up to align the paper.

Battery Switch:

Set the switch to (ON) position only when charging the optional battery pack or working the printer with it.

Dip Switches:

Note: This printer has three emulation modes, IBM Proprinter XL24e, Epson LQ-510, and Canon BJ130e.

IBM Mode:

Switch	ON	OFF
1 Auto sheet feeder mode	Enable	Disable*
2 Graphics image density	Normal	High*
3 Automatic line feed	CR with LF	CR only*
4 Page length	12 inches	11 inches*
5 Character set	Set 2	Set 1*
6 Automatic carriage return	LF with CR	LF only*
7 Alternate graphics mode	Enable	Disable*
8 Receive buffer/download memory size	3KB/34KB	37KB/0KB*
9 Code page	Multilingual 850	USA 437*
10 Printer control mode	---	IBM*
11 Printer control mode	---	IBM*

\* indicates factory default

Canon Mode:

Same as IBM mode, except DIP switch 10 is ON.

EPSON Mode:

Switch	ON	OFF

1	Auto sheet feeder mode	Enable	Disable
2	Graphics image density	Normal	High
3	Automatic line feed	CR with LF	CR only
4	Page length	12 inches	11 inches
5	Character set	Set 2	Set 1
6	International	See Table A	
7	Character Set		
8			
9	Font Selection	See Table B	
10			
11	Printer control mode	Epson	---

TABLE A

TABLE B

Country				Font		
	6	7	8		9	10
USA	OFF	OFF	OFF	Roman	OFF	OFF
France	OFF	OFF	ON	Sans serif	OFF	ON
Germany	OFF	ON	OFF	Draft	ON	--
UK	OFF	ON	ON			
Denmark	ON	OFF	OFF			
Sweden	ON	OFF	ON			
Italy	ON	ON	OFF			
Spain	ON	ON	ON			

Faxback Document # 4127 will give detailed information on setting the DIP switches.

(jej 04/26/94)