



Paper Bail Lever:

Used to pull the paper bail forward. Pulling the paper bail lever forward will invoke the "automatic paper loading" function. The paper advances to 1/2 inch above the print start position. Pushing the paper bail back will retract the paper to the print start position.

Paper Selector:

Pull the paper selector forward to select tractor feed paper, or backward for single sheet paper.

Power Switch:

Rock the switch backward to turn ON the DMP-203. Rock the switch forward to turn OFF the printer.

Control Panel:

Two panel switches allow the user to custom configure the default setup of the printer and control paper loading/unloading. Faxback Document # 4157 will provide specific instructions on using the control panel.

Paper Adjustment Knob:

Used to make adjustments to the print start position. Clockwise to advance

the paper, counterclockwise to retract the paper.

Print Head Adjustment Lever:

Used to change the distance between the print head and platen. Forward to increase the distance, backward to decrease the distance. Faxback Document # 4160 will provide a more detailed use of the print head adjustment lever.

Dip Switches:

Switch	ON	OFF
1	CR=CR+LF	CR=CR
2	LF=LF+CR	LF=LF
3	AGM Valid	Invalid
4	Ram Download	Ram Buffer

Faxback Document # 4151 will give detailed information on setting the DIP switches.

(jej 04/25/94)