

If you follow the instructions in this manual and still have trouble operating your VCR, refer to the following troubleshooting chart.

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
No Power.	The power cord is not connected.	Plug the power cord into an AC outlet.
Timer recording is not possible.	The program timer is not set is set incorrectly. The power is on.	Set the program timer correctly. Turn of the power
Cannot record.	The erase-protection tab is missing.	Place a piece of plastic tape over the tab hole.
Picture is poor on playback.	The TV channel selector is not set to the proper channel. The TV fine tuning is not set correctly. Audio/Video connections are incorrect.	On playback, set the TV channel selector to Channel 3 or 4. Fine tune your TV. Double-check all connections.
Video distortion on playback.	The video heads are dirty. The tracking is not properly adjusted.	Clean the video heads. Adjust the TRACK control for a better picture.
No picture during playback.	The TV is not set to the proper channel. Audio/Video connections are incorrect.	Set it to the correct channel (Channel 3 or 4). Double-check all connections.
Operation buttons do not work when the power is on and the cassette is inserted.	The internal mechanism might need to be reset.	Press EJECT on the VCR several times. Unplug the VCR and plug it in again after one full minute.
Off-the-air TV programs cannot be seen.	The connections are not correctly made. TU/AV is not set correctly.	Recheck the connections. Set TU/AV on the remote control to the tuner

		mode.
Remote control does not operate.	The batteries are weak or dead.	Replace the batteries.

(ALL-10/28/94)